WR3 Quick Reference Guide

Recall Code	Description
0	Failed stopped test
1	Failed running test
2	Tach Fault (No Tach Signal for 3 min.)
3	Sanction test
4	Consecutive fails
5	Missed retest
6	Retest time lapse fail
7	Start violation
8	Power Disconnect 5 mins x 3
9	Consecutive humming aborts
10	Log full (90%)
11	Emergency override activated
12	Ignition fault (engine running with no ignition)
13	Emergency override no code
14	15 min. power disconnect

WR3 Trouble Shooting

	e	
Display Message	Reason	Solution
Abort 40/55/40/50	Piston/pump problem	Handset exchange (if frequently occurs)
Abort 30	Blow tube Temp error	Handset exchange (if frequently occurs)
Abort 10	Fuel cell temp problem	Handset exchange (if frequently occurs)
HS Lithium battery error	Handset battery problem	Handset exchange
HS RTC Error	Handset clock error	Handset exchange
HS Voltage high/low	Voltage to handset not stable	If vehicles battery is good, handset exchange. If still exist, proceed with interlock exchange
IM Lithium battery error	Possible IM battery problem.	Interlock exchange
IM RTC error	Possible IM clock error	Interlock exchange
Communication error	Poor connection between IM and HS	Handset exchange. If problem still exists proceed with interlock exchange. Change communication cable if problem still exists.

Key violation (key left on for 6 mins. without starting)

(Please refer to the reverse side for proper exchange procedure)

Description

WR3 Quick Reference Guide

	_
0	Failed stopped test
1	Failed running test
2	Tach Fault (No Tach Signal for 3 min.)
2 3	Sanction test
4	Consecutive fails
4 5	Missed retest
6	Retest time lapse fail
7	Start violation
8	Power Disconnect 5 mins x 3
9	Consecutive humming aborts
10	Log full (90%)
11	Emergency override activated
12	Ignition fault (engine running with no ignition)
13	Emergency override no code
14	15 min. power disconnect
15	TPM code used
16	Key violation (key left on for 6 mins. without starting)
WR3 Tr	ouble Shooting

Recall Code

Display Message	Reason	Solution
Abort 40/55/40/50	Piston/pump problem	Handset exchange (if frequently occurs)
Abort 30	Blow tube Temp error	Handset exchange (if frequently occurs)
Abort 10	Fuel cell temp problem	Handset exchange (if frequently occurs)
HS Lithium battery error	Handset battery problem	Handset exchange
HS RTC Error	Handset clock error	Handset exchange
HS Voltage high/low	Voltage to handset not stable	If vehicles battery is good, handset exchange. If still exist, proceed with interlock exchange
IM Lithium battery error	Possible IM battery problem.	Interlock exchange
IM RTC error	Possible IM clock error	Interlock exchange
Communication error	Poor connection between IM and HS	Handset exchange. If problem still exists proceed with interlock exchange. Change communication cable if problem still exists.

WR3 Quick Reference Guide

Recall Code	Description
0	Failed stopped test
1	Failed running test
2	Tach Fault (No Tach Signal for 3 min.)
3	Sanction test
2 3 4	Consecutive fails
5	Missed retest
6	Retest time lapse fail
6 7 8	Start violation
8	Power Disconnect 5 mins x 3
9	Consecutive humming aborts
10	Log full (90%)
11	Emergency override activated
12	Ignition fault (engine running with no ignition)
13	Emergency override no code
14	15 min. power disconnect
15	TPM code used
16	Key violation (key left on for 6 mins. without starting)

WR3 Trouble Shooting

Display Message	Reason	Solution
Abort 40/55/40/50	Piston/pump problem	Handset exchange (if frequently occurs)
Abort 30	Blow tube Temp error	Handset exchange (if frequently occurs)
Abort 10	Fuel cell temp problem	Handset exchange (if frequently occurs)
HS Lithium battery error	Handset battery problem	Handset exchange
HS RTC Error	Handset clock error	Handset exchange
HS Voltage high/low	Voltage to handset not stable	If vehicles battery is good, handset exchange. If still exist, proceed with interlock exchange
IM Lithium battery error	Possible IM battery problem.	Interlock exchange
IM RTC error	Possible IM clock error	Interlock exchange
Communication error	Poor connection between IM and HS	Handset exchange. If problem still exists proceed with interlock exchange. Change communication cable if problem still exists.

(Please refer to the reverse side for proper exchange procedure)

WR3 Quick Reference Guide

Recall Code	Description
0	Failed stopped test
1	Failed running test
2	Tach Fault (No Tach Signal for 3 min.)
3	Sanction test
4	Consecutive fails
4 5	Missed retest
6	Retest time lapse fail
7	Start violation
8	Power Disconnect 5 mins x 3
9	Consecutive humming aborts
10	Log full (90%)
11	Emergency override activated
12	Ignition fault (engine running with no ignition)
13	Emergency override no code
14	15 min. power disconnect
15	TPM code used
1.6	V av violation (lyav laft on fan 6 mins vyithaut stanting)

WR3 Trouble Shooting

Display Message	Reason	Solution
Abort 40/55/40/50	Piston/pump problem	Handset exchange (if frequently occurs)
Abort 30	Blow tube Temp error	Handset exchange (if frequently occurs)
Abort 10	Fuel cell temp problem	Handset exchange (if frequently occurs)
HS Lithium battery error	Handset battery problem	Handset exchange
HS RTC Error	Handset clock error	Handset exchange
HS Voltage high/low	Voltage to handset not stable	If vehicles battery is good, handset exchange. If still exist, proceed with interlock exchange
IM Lithium battery error	Possible IM battery problem.	Interlock exchange
IM RTC error	Possible IM clock error	Interlock exchange
Communication error	Poor connection between IM and HS	Handset exchange. If problem still exists proceed with interlock exchange. Change communication cable if problem still exists.

WR3 Quick Reference Guide

Recall Code	Description		
0	Failed stopped test		
1	Failed runi	ning test	
2	Tach Fault	(No Tach Signal for 3 r	nin.)
2 3	Sanction test		
4 5	Consecutiv	ve fails	
5	Missed ret	est	
6	Retest time	e lapse fail	
6 7	Start violat	tion	
8	Power Dis	connect 5 mins x 3	
9	Consecutiv	e humming aborts	
10	Log full (9	0%)	
11	Emergency override activated		
12	Ignition fault (engine running with no ignition)		
13	Emergency override no code		
14	15 min. power disconnect		
15	TPM code	used	
16	Key violat	ion (key left on for 6 min	s. without starting)
MIDA T	11 (1	4.	
WR3 Trouble Shooting			
Display Me	essage	Reason	Solution
Abort 40/55	/40/50	Piston/pump problem	Handset exchange (if frequently occurs)

Display Message	Reason	Solution
Abort 40/55/40/50	Piston/pump problem	Handset exchange (if frequently occurs)
Abort 30	Blow tube Temp error	Handset exchange (if frequently occurs)
Abort 10	Fuel cell temp problem	Handset exchange (if frequently occurs)
HS Lithium battery error	Handset battery problem	Handset exchange
HS RTC Error	Handset clock error	Handset exchange
HS Voltage high/low	Voltage to handset not stable	If vehicles battery is good, handset exchange. If still exist, proceed with interlock exchange
IM Lithium battery error	Possible IM battery problem.	Interlock exchange
IM RTC error	Possible IM clock error	Interlock exchange
Communication error	Poor connection between IM and HS	Handset exchange. If problem still exists proceed with interlock exchange. Change communication cable if problem still exists.

(Please refer to the reverse side for proper exchange procedure)

WR3 Quick Reference Guide

Recall Code	Description
0	Failed stopped test
1	Failed running test
2	Tach Fault (No Tach Signal for 3 min.)
2 3	Sanction test
4	Consecutive fails
4 5	Missed retest
6	Retest time lapse fail
7	Start violation
8	Power Disconnect 5 mins x 3
9	Consecutive humming aborts
10	Log full (90%)
11	Emergency override activated
12	Ignition fault (engine running with no ignition)
13	Emergency override no code
14	15 min. power disconnect
15	TPM code used
16	Key violation (key left on for 6 mins without starting)

WR3 Trouble Shooting

Display Message	Reason	Solution
Abort 40/55/40/50	Piston/pump problem	Handset exchange (if frequently occurs)
Abort 30	Blow tube Temp error	Handset exchange (if frequently occurs)
Abort 10	Fuel cell temp problem	Handset exchange (if frequently occurs)
HS Lithium battery error	Handset battery problem	Handset exchange
HS RTC Error	Handset clock error	Handset exchange
HS Voltage high/low	Voltage to handset not stable	If vehicles battery is good, handset exchange. If still exist, proceed with interlock exchange
IM Lithium battery error	Possible IM battery problem.	Interlock exchange
IM RTC error	Possible IM clock error	Interlock exchange
Communication error	Poor connection between IM and HS	Handset exchange. If problem still exists proceed with interlock exchange. Change communication cable if problem still exists.

WR3 Quick Reference Guide

Recall Code	Description
0	Failed stopped test
1	Failed running test
2	Tach Fault (No Tach Signal for 3 min.)
3	Sanction test
4	Consecutive fails
2 3 4 5 6 7 8	Missed retest
6	Retest time lapse fail
7	Start violation
8	Power Disconnect 5 mins x 3
9	Consecutive humming aborts
10	Log full (90%)
11	Emergency override activated
12	Ignition fault (engine running with no ignition)
13	Emergency override no code
14	15 min. power disconnect
15	TPM code used
16	Key violation (key left on for 6 mins. without starting)
WR3 Tro	nuble Shooting

WR3 Trouble Shooting

Display Message	Reason	Solution
Abort 40/55/40/50	Piston/pump problem	Handset exchange (if frequently occurs)
Abort 30	Blow tube Temp error	Handset exchange (if frequently occurs)
Abort 10	Fuel cell temp problem	Handset exchange (if frequently occurs)
HS Lithium battery error	Handset battery problem	Handset exchange
HS RTC Error	Handset clock error	Handset exchange
HS Voltage high/low	Voltage to handset not stable	If vehicles battery is good, handset exchange. If still exist, proceed with interlock exchange
IM Lithium battery error	Possible IM battery problem.	Interlock exchange
IM RTC error	Possible IM clock error	Interlock exchange
Communication error	Poor connection between IM and HS	Handset exchange. If problem still exists proceed with interlock exchange. Change communication cable if problem still exists.

(Please refer to the reverse side for proper exchange procedure)

WR3 Quick Reference Guide

Recall Code	Description
0	Failed stopped test
1	Failed running test
2	Tach Fault (No Tach Signal for 3 min.)
2 3 4 5	Sanction test
4	Consecutive fails
	Missed retest
6 7	Retest time lapse fail
	Start violation
8	Power Disconnect 5 mins x 3
9	Consecutive humming aborts
10	Log full (90%)
11	Emergency override activated
12	Ignition fault (engine running with no ignition)
13	Emergency override no code
14	15 min. power disconnect
15	TPM code used
16	Key violation (key left on for 6 mins. without starting)

WR3 Trouble Shooting

Display Message	Reason	Solution
Abort 40/55/40/50	Piston/pump problem	Handset exchange (if frequently occurs)
Abort 30	Blow tube Temp error	Handset exchange (if frequently occurs)
Abort 10	Fuel cell temp problem	Handset exchange (if frequently occurs)
HS Lithium battery error	Handset battery problem	Handset exchange
HS RTC Error	Handset clock error	Handset exchange
HS Voltage high/low	Voltage to handset not stable	If vehicles battery is good, handset exchange. If still exist, proceed with interlock exchange
IM Lithium battery error	Possible IM battery problem.	Interlock exchange
IM RTC error	Possible IM clock error	Interlock exchange
Communication error	Poor connection between IM and HS	Handset exchange. If problem still exists proceed with interlock exchange. Change communication cable if problem still exists.

(Please refer to the reverse side for proper exchange procedure)

Handset Exchange

Do not perform any Handset Procedures on either the original or new Handset

- 1) Obtain new handset, plug into Cal/Download station, calibrate Handset and complete a HS Exchange transaction under the client's name.
- 2) Plug the new Handset into vehicle and press button to activate.
- 3) Once the new handset has been activated, the original handset must be connected to Cal/Download station so that a Handset Return transaction can be completed under the client's name.

Interlock Exchange Procedure

- 1) With the original handset, complete a maintenance procedure in the vehicle
- 2) Then plug the Handset into Cal/download station and complete an Interlock Maintenance transaction.
- 3) With a New Interface Module in client's vehicle. do an install procedure with either a new handset or original.
- Once installed procedure is completed, plug back into Cal/download station and complete an Interlock Exchange transaction.
- 5) Activate Handset in client's vehicle

Quick Wire Reference

Wire #	Color	Location
4	Red	+12 Volts (Main Power)
13	Red-Yellow	+12 Volts (Main Power)
5	Black	Ground
1	Black-Yellow	Ground
24	White	Ignition (+12 volts switched on position only)
19	Blue/Yellow	Starter (coming from the ignition switch)
10	Light Blue	Starter (going to the starter)
8	Orange	Alarm horn + (positive)
15	Light Green	Tachometer
14	Yellow	Brake

Monitor Procedure

- 1) With handset in client's vehicle, input service code and select Monitor in the service mode.
- 2) Complete Monitor procedure in client's vehicle
- 3) Calibrate Handset
- Complete a Monitor transaction
- 5) Activate HS in client vehicle

Handset Exchange

Do not perform any Handset Procedures on either the original or new Handset

- 1) Obtain new handset, plug into Cal/Download station, calibrate Handset
- and complete a HS Exchange transaction under the client's name.

 2) Plug the new Handset into vehicle and press button to activate.
- 3) Once the new handset has been activated, the original handset must be connected to Cal/Download station so that a Handset Return transaction can be completed under the client's name

Interlock Exchange Procedure

- 1) With the original handset, complete a maintenance procedure in the vehicle Then plug the Handset into Cal/download station and complete an Interlock
- Maintenance transaction.
- 3) With a New Interface Module in client's vehicle. do an install procedure with either a new handset or original.
- 4) Once installed procedure is completed, plug back into Cal/download station and complete an Interlock Exchange transaction
- 5) Activate Handset in client's vehicle

Quick Wire Reference

Wire #	Color	Location
4	Red	+12 Volts (Main Power)
13	Red-Yellow	+12 Volts (Main Power)
5	Black	Ground
1	Black-Yellow	Ground
24	White	Ignition (+12 volts switched on position only)
19	Blue/Yellow	Starter (coming from the ignition switch)
10	Light Blue	Starter (going to the starter)
8	Orange	Alarm horn + (positive)
15	Light Green	Tachometer
14	Yellow	Brake

Monitor Procedure

- 1) With handset in client's vehicle, input service code and select Monitor in the
- 2) Complete Monitor procedure in client's vehicle
- 3) Calibrate Handset
- Complete a Monitor transaction 5) Activate HS in client vehicle

Handset Exchange

Do not perform any Handset Procedures on either the original or new Handset

- 1) Obtain new handset, plug into Cal/Download station, calibrate Handset
- and complete a HS Exchange transaction under the client's name. 2) Plug the new Handset into vehicle and press button to activate.
- 3) Once the new handset has been activated, the original handset must be connected to Cal/Download station so that a Handset Return transaction can be completed under the client's name.

Interlock Exchange Procedure

- 1) With the original handset, complete a maintenance procedure in the vehicle
- 2) Then plug the Handset into Cal/download station and complete an Interlock Maintenance transaction.
- 3) With a New Interface Module in client's vehicle. do an install procedure with either a new handset or original.
- Once installed procedure is completed, plug back into Cal/download station and complete an Interlock Exchange transaction.
- 5) Activate Handset in client's vehicle

Quick Wire Reference

Wire #	Color	Location
4	Red	+12 Volts (Main Power)
13	Red-Yellow	+12 Volts (Main Power)
5	Black	Ground
1	Black-Yellow	Ground
24	White	Ignition (+12 volts switched on position only)
19	Blue/Yellow	Starter (coming from the ignition switch)
10	Light Blue	Starter (going to the starter)
8	Orange	Alarm horn + (positive)
15	Light Green	Tachometer
14	Yellow	Brake

Monitor Procedure

- 1) With handset in client's vehicle, input service code and select Monitor in the service mode.
- 2) Complete Monitor procedure in client's vehicle
- Complete a Monitor transaction
- 5) Activate HS in client vehicle

Handset Exchange

Do not perform any Handset Procedures on either the original or new Handset

- 1) Obtain new handset, plug into Cal/Download station, calibrate Handset
- and complete a HS Exchange transaction under the client's name.

 2) Plug the new Handset into vehicle and press button to activate.
- 3) Once the new handset has been activated, the original handset must be connected to Cal/Download station so that a Handset Return transaction can be completed under the client's name

Interlock Exchange Procedure

- 1) With the original handset, complete a maintenance procedure in the vehicle
- Then plug the Handset into Cal/download station and complete an I Maintenance transaction.
- 3) With a New Interface Module in client's vehicle. do an install procedure with either a new handset or original.
- 4) Once installed procedure is completed, plug back into Cal/download station and complete an Interlock Exchange transaction
- 5) Activate Handset in client's vehicle

Quick Wire Reference

Wire #	Color	Location
4	Red	+12 Volts (Main Power)
13	Red-Yellow	+12 Volts (Main Power)
5	Black	Ground
1	Black-Yellow	Ground
24	White	Ignition (+12 volts switched on position only)
19	Blue/Yellow	Starter (coming from the ignition switch)
10	Light Blue	Starter (going to the starter)
8	Orange	Alarm horn + (positive)
15	Light Green	Tachometer
14	Yellow	Brake

Monitor Procedure

- 1) With handset in client's vehicle, input service code and select Monitor in the
- 2) Complete Monitor procedure in client's vehicle
- 3) Calibrate Handset
- 4) Complete a Monitor transaction 5) Activate HS in client vehicle

Handset Exchange

Do not perform any Handset Procedures on either the original or new Handset

- 1) Obtain new handset, plug into Cal/Download station, calibrate Handset
- and complete a HS Exchange transaction under the client's name.

 2) Plug the new Handset into vehicle and press button to activate.
- 3) Once the new handset has been activated, the original handset must be connected to Cal/Download station so that a Handset Return transaction can be completed under the client's name.

Interlock Exchange Procedure

- 1) With the original handset, complete a maintenance procedure in the vehicle.
- 2) Then plug the Handset into Cal/download station and complete an Interlock Maintenance transaction.
- 3) With a New Interface Module in client's vehicle. do an install procedure with either a new handset or original.
- Once installed procedure is completed, plug back into Cal/download station and complete an Interlock Exchange transaction.
- 5) Activate Handset in client's vehicle

Quick Wire Reference

Wire #	Color	Location
4	Red	+12 Volts (Main Power)
13	Red-Yellow	+12 Volts (Main Power)
5	Black	Ground
1	Black-Yellow	Ground
24	White	Ignition (+12 volts switched on position only)
19	Blue/Yellow	Starter (coming from the ignition switch)
10	Light Blue	Starter (going to the starter)
8	Orange	Alarm horn + (positive)
15	Light Green	Tachometer
14	Yellow	Brake

Monitor Procedure

- 1) With handset in client's vehicle, input service code and select Monitor in the service mode.
- 2) Complete Monitor procedure in client's vehicle
- 3) Calibrate Handset
- Complete a Monitor transaction
- 5) Activate HS in client vehicle

Handset Exchange

Do not perform any Handset Procedures on either the original or new Handset

- 1) Obtain new handset, plug into Cal/Download station, calibrate Handset
- and complete a HS Exchange transaction under the client's name.

 2) Plug the new Handset into vehicle and press button to activate.
- 3) Once the new handset has been activated, the original handset must be connected to Cal/Download station so that a Handset Return transaction can be completed under the client's name

Interlock Exchange Procedure

- 1) With the original handset, complete a maintenance procedure in the vehicle.
- Then plug the Handset into Cal/download station and complete an Int Maintenance transaction.
- 3) With a New Interface Module in client's vehicle. do an install procedure with either a new handset or original. 4) Once installed procedure is completed, plug back into Cal/download station
- and complete an Interlock Exchange transaction
- 5) Activate Handset in client's vehicle

Quick Wire Reference

Wire #	Color	Location
4	Red	+12 Volts (Main Power)
13	Red-Yellow	+12 Volts (Main Power)
5	Black	Ground
1	Black-Yellow	Ground
24	White	Ignition (+12 volts switched on position only)
19	Blue/Yellow	Starter (coming from the ignition switch)
10	Light Blue	Starter (going to the starter)
8	Orange	Alarm horn + (positive)
15	Light Green	Tachometer
14	Yellow	Brake

Monitor Procedure

- 1) With handset in client's vehicle, input service code and select Monitor in the
- 2) Complete Monitor procedure in client's vehicle 3) Calibrate Handset
- 4) Complete a Monitor transaction 5) Activate HS in client vehicle

Handset Exchange

Do not perform any Handset Procedures on either the original or new Handset

- 1) Obtain new handset, plug into Cal/Download station, calibrate Handset
- and complete a HS Exchange transaction under the client's name.

 2) Plug the new Handset into vehicle and press button to activate.
- 3) Once the new handset has been activated, the original handset must be connected to Cal/Download station so that a Handset Return transaction can be completed under the client's name.

Interlock Exchange Procedure

- 1) With the original handset, complete a maintenance procedure in the vehicle
- 2) Then plug the Handset into Cal/download station and complete an Interlock Maintenance transaction.
- 3) With a New Interface Module in client's vehicle. do an install procedure with either a new handset or original.
- Once installed procedure is completed, plug back into Cal/download station and complete an Interlock Exchange transaction.
- 5) Activate Handset in client's vehicle

Quick Wire Reference

	Wire #	Color	Location
	4	Red	+12 Volts (Main Power)
	13	Red-Yellow	+12 Volts (Main Power)
Ì	5	Black	Ground
	1	Black-Yellow	Ground
	24	White	Ignition (+12 volts switched on position only)
	19	Blue/Yellow	Starter (coming from the ignition switch)
	10	Light Blue	Starter (going to the starter)
	8	Orange	Alarm horn + (positive)
Ì	15	Light Green	Tachometer
	14	Yellow	Brake

Monitor Procedure

- 1) With handset in client's vehicle, input service code and select Monitor in the service mode.
- 2) Complete Monitor procedure in client's vehicle
- 3) Calibrate Handset
- Complete a Monitor transaction 5) Activate HS in client vehicle

Handset Exchange

- Do not perform any Handset Procedures on either the original or new Handset
- 1) Obtain new handset, plug into Cal/Download station, calibrate Handset
- and complete a HS Exchange transaction under the client's name.

 2) Plug the new Handset into vehicle and press button to activate. 3) Once the new handset has been activated, the original handset must be connected to Cal/Download station so that a Handset Return transaction

Interlock Exchange Procedure

can be completed under the client's name

- 1) With the original handset, complete a maintenance procedure in the vehicle
- 2) Then plug the Handset into Cal/download station and complete an Inte Maintenance transaction.
- 3) With a New Interface Module in client's vehicle. do an install procedure with either a new handset or original. 4) Once installed procedure is completed, plug back into Cal/download station
- and complete an Interlock Exchange transaction 5) Activate Handset in client's vehicle

Quick Wire Reference

L	Wire #	Color	Location
	4	Red	+12 Volts (Main Power)
	13	Red-Yellow	+12 Volts (Main Power)
	5	Black	Ground
	1	Black-Yellow	Ground
	24	White	Ignition (+12 volts switched on position only)
Γ	19	Blue/Yellow	Starter (coming from the ignition switch)
Γ	10	Light Blue	Starter (going to the starter)
	8	Orange	Alarm horn + (positive)
Γ	15	Light Green	Tachometer
	14	Yellow	Brake

Monitor Procedure

- 1) With handset in client's vehicle, input service code and select Monitor in the service mode.
- 2) Complete Monitor procedure in client's vehicle
- 3) Calibrate Handset
- 4) Complete a Monitor transaction
- 5) Activate HS in client vehicle