


## Introduction

The interlock handset cable connects from the handset to the interface module, which is connected to the vehicle's ignition. The handset should remain connected at all times, but in instances where the handset needs to be removed or connected, follow these new steps.

## Instructions

### To Disconnect

1. Make sure the vehicle motor is off.
2. The handset cable consists of a connector, a sleeve and a cord (see figure).
3. Release the connector from the interface module plug by pulling back on the sleeve to release the connector. The handset cable is disconnected.

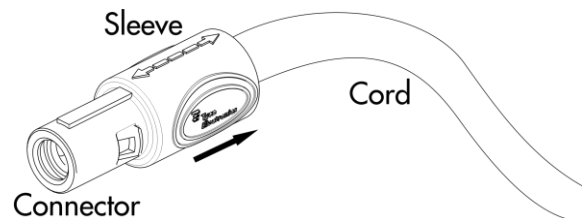

**Warning! Do NOT pull on the handset cord. Do NOT turn the connector. This damages the cable.**

### To Connect

1. With the vehicle motor off, locate the green arrows on the handset cable connector and plug.



**Note! If the vehicle's motor is running, the interface module plug flashes green and beeps every 15 seconds.**

2. Line up the green arrows and gently push the connector into the interface module plug. A light click is heard if properly connected.
3. A Wait message is displayed on the handset. WR3 may require another breath test. Observe the message on the display.