




The default Pass level for Alcolab is from 0mg% - 20mg% and the Fail level is 50mg% – 120mg%. These levels can be changed to comply with the limits of various jurisdictions. This guide describes the procedure for changing the Fail threshold.

## Changing the Fail Threshold

1. Place the Alcolab on a flat surface and using the Keys provided, unlock and completely remove the back panel, leaving all the cables intact. The keyhole is located under the unit.
2. You should see a Printed Circuit Board (PCB) with **Select** and **Set** buttons. These buttons are located directly above the power cable connection on the PCB.

*Note: Pressing the **Select** button repeatedly scrolls through the available parameters in the upper display windows on the top left. The **Set** button allows you to change the value of the selected parameter in the lower display window.*

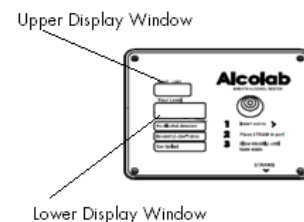

3. Place the Alcolab upright on the table and plug the power cable into the wall socket to Power it on.
4. Press the **Select** button to see **d<sup>-</sup> 10** in the upper display window with a flashing digit in the lower display window.
5. Press the **Select** button repeatedly till you see the **FAL** parameter appear on the upper display window. This option allows you to set the desired threshold for fail.
6. Press the **Set** button to set the desired value for the flashing number then press the **Select** button to jump to the next number and set the value by pressing the **Set** button again.
7. Set the **FAL** value to 040 and continue pressing the **Select** button repeatedly till you hear two long beeps.
8. The upper display window should now indicate 0.040 as the Fail Limit.