



# AUTOMOTIVE DIAGNOSTIC TOOL

Instruction Manual

### Introduction

The Automotive Diagnostic Tool can be used during the installation of an alcohol interlock to determine the function (power, ignition, start) of the wires in the vehicle main harness, measure tach signal or locate the best position for the Digital Tach Sensor (DTS), or simulate a tach signal to perform tests when an alcohol interlock registers a "Tach Fault".


### ▲ WARNING!

- Do not attempt to use device to measure amperage or AC voltage
- Do not attempt to measure voltage that may be over +50V DC
- Failure to follow these warnings can result in damage to the device and personal injury

## Contents

Introduction	
Contents	03
Parts included	04
Handset function	05
Basic function	05
Display	06
Functions	06
Other indicators	07
Batteries	07
Testing wire voltage	
Determining wire function	09
Locating tach signal on alternator	
Measuring tach signal	
Simulating tach signal	
Troubleshooting	
Contact information	
Replacement parts	14
Notes	

### Parts included

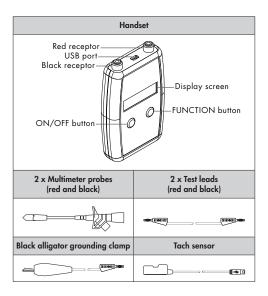

### Handset function

### **Basic function**

- To turn on handset, press and hold ON/OFF (left) button for three seconds
- When on, pressing the ON/OFF button without hold will turn a back light on/off
- Use the **FUNCTION** (right) button to scroll to the desired function
- To turn off, press and hold ON/OFF button for three seconds

### **NOTE:**

 
The device has an auto-off feature that will shut it down after it has been left idle for five minutes.

# Handset function

### Display

### Functions

Functions are shown on the display with text and comma indicators that line up with function names on the label:






RPM DDDD

### VOLTAGE

Indicated by VOLT X.XX and comma position 1

LOCATE TACH Indicated by TACH XXX and comma position 2

MEASURE TACH Indicated by RPM XXXX and comma position 3

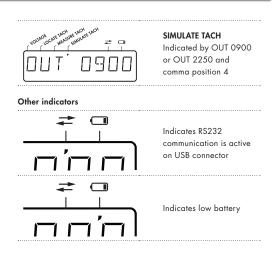

### **Batteries**

The device takes two AA, 1.5V alkaline batteries.

### ▲ CAUTION!

Before performing any test, it is Automotive Diagnostic Tool to a shock. To ground the diagnostic grounding clamp or black multi into black receptor on handset, ground source or the probe to g

- Turn on handset and press I VOLTAGE function, indicate and comma position 1.
- Connect red multimeter pro Press base of probe to export tested against exposed con should pinch the wire.

### B NOTE:

It is important to make sure the the wire in order to get a readin on the device, wiggle the probe

# Determining wire function

In the vehicle main wire harness, individual wire function may be determined based on the following readings:



The POWER wire (continuous unswitched source wire) will register at approximately +12 or +24 volts in any key position



The IGNITION wire (non-continuous switched source wire) will register at approximately +12 or +24 volts only when the key is in the "ON" or "START" position



The START wire will register at +12 or +24 volts only when the key is in the "START" position

Ground wire will not register any volts under any circumstances

# Locating tach signal on alternator

If a tach signal wire cannot be found or signal is weak, it may be necessary to determine the best location to fasten the permanent Digital Tach Sensor (DTS) on the alternator:

- Turn on handset and press FUNCTION button until reaching the LOCATE TACH function, indicated on display by "TACH 000" and comma position 2.
- 2. Insert tach sensor into USB port on top of device.
- 3. Place (DTS) sensor on the top of the alternator to determine where the strongest signal is and move sensor around if it is still showing a weak or no signal at all. This will be the point that the permanent DTS needs to be fastened.

# Measuring tach signal

To determine if there is a good signal from the tach signal wire, perform the following steps:

- Turn on handset and press FUNCTION button until reaching MEASURE TACH function, indicated on display by "RPM 000" and comma in position 3.
- Connect alligator clamp to black receptor and red multimeter probe to red receptor on handset. Under the hood, attach alligator clamp to ground source.
- With vehicle running, pinch tach wire with red multimeter probe.
- The tach reading will be given on the display. (Make sure to rev engine over 1000 RPM to see if tach signal is rising and signal does not drop)

# Simulating tach signal

In the case that the alcohol interlock registers a "Tach Fault", this function is used to determine if there is a problem with the tach signal (either in the wiring or digital tach signal) or the ECU itself.

- If a tach fault occurs, cut the tach signal wire and connect red multimeter probe to wire leading to ECU.
- Press the FUNCTION button on the handset until "OUT 0900" or "OUT 2250" appears on display.
- OUT 0900 will simulate a tach signal as if the engine was idling. OUT 2250 will simulate a tach signal as if the engine was revving. To switch between the two, press the ON/OFF button while in this mode.
- 4. If the ECU registers the simulated tach signal, the problem is with the vehicle's tach signal. If the ECU does not register the simulated tach signal, the problem is with the ECU.

# Troubleshooting

If the Automotive Diagnostic Tool is malfunctioning, send back to ACS for maintenance or replacement.

### **Contact information**

For assistance, contact your jurisdictional program manager.

#### Alcohol Countermeasure Systems Corp

60 International Boulevard Toronto, Ontario M9W 6J2 CANADA

# Replacement parts

To order a new device or replacement parts, contact ACS and refer to the appropriate part number(s) below:

Part name	Part number
Handset	15-000408
Multimeter probe (red)	22-000827
Multimeter probe (black)	22-000826
Test lead (red)	27-000144
Test lead (black)	27-000143
Black alligator grounding clamp	13-001122
Tach sensor assembly with mini USB connector	13-001121

### Notes

ALCOHOL COUNTERMEASURE SYSTEMS, ACS and The Molly are trademarks of Alcohol Countermeasure Systems (International) Inc. and are used under license. Alcohol Countermeasure Systems is trading style of Alcohol Countermeasure Systems Corp.

acs-corp.com



IRM-EN-60-000196-A Copyright © 2012